
 


Инв. №подл.	Подп. и дата	Взам. инв. №	Инв. №дубл.	Подп. и дата

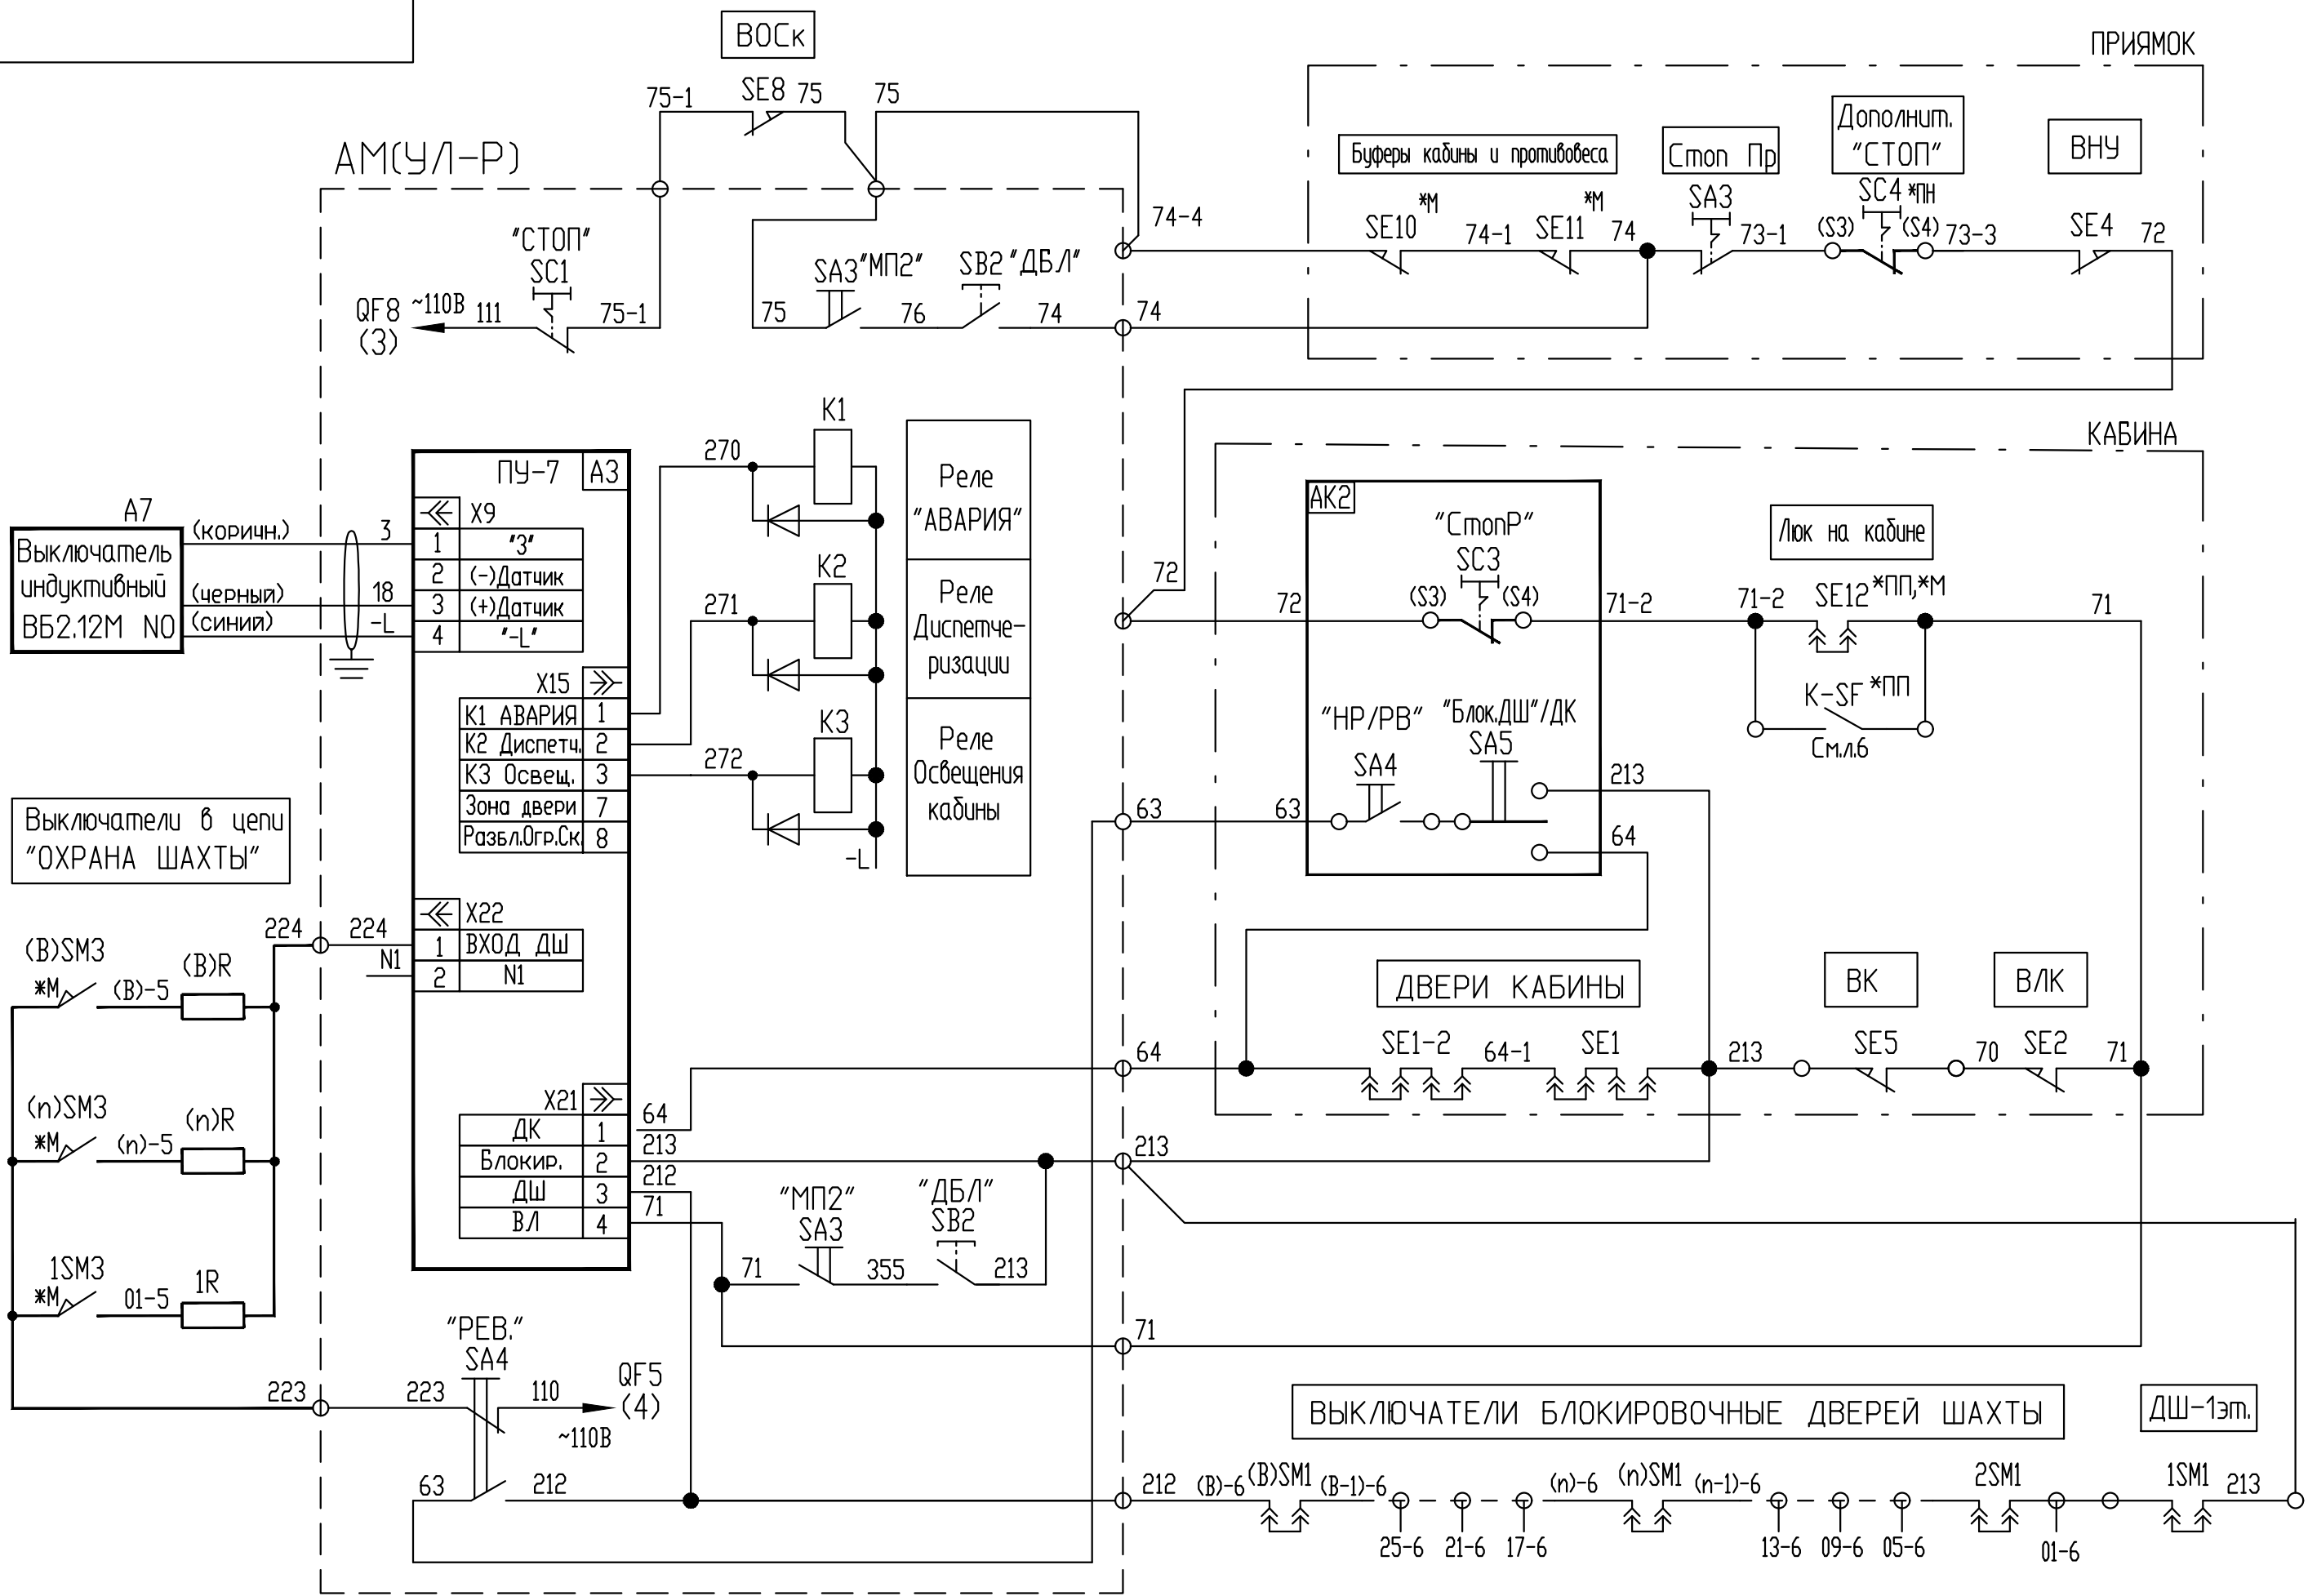




Кабина. Пост приказов


Кнопки вызовов на этажах.

Индикация кнопок вызовов

	Stb*1	Stb*2	Stb*3	Stb*4	Stb*5	Stb*6	Stb*7	Stb*8		Ustb*1	Ustb*2	Ustb*3	Ustb*4	Ustb*5	Ustb*6	Ustb*7	Ustb*8	
Str*1	KB9 ↑	KB17 ↑	KB25 ↑		KB1	KB9 ↓	KB17 ↓	KB25 ↓			*B9 ↑	*B17 ↑	*B25 ↑		*B1	*B9 ↓	*B17 ↓	*B25 ↓
Str*2	KB2 ↑	KB10 ↑	KB18 ↑	KB26 ↑	KB2 ↓	KB10 ↓	KB18 ↓	KB26 ↓		*B2 ↑	*B10 ↑	*B18 ↑	*B26 ↑		*B2 ↓	*B10 ↓	*B18 ↓	*B26 ↓
Str*3	KB3 ↑	KB11 ↑	KB19 ↑	KB27 ↑	KB3 ↓	KB11 ↓	KB19 ↓	KB27 ↓		*B3 ↑	*B11 ↑	*B19 ↑	*B27 ↑		*B3 ↓	*B11 ↓	*B19 ↓	*B27 ↓
Str*4	KB4 ↑	KB12 ↑	KB20 ↑	KB28 ↑	KB4 ↓	KB12 ↓	KB20 ↓	KB28 ↓		*B4 ↑	*B12 ↑	*B20 ↑	*B28 ↑		*B4 ↓	*B12 ↓	*B20 ↓	*B28 ↓
Str*5	KB5 ↑	KB13 ↑	KB21 ↑	KB29 ↑	KB5 ↓	KB13 ↓	KB21 ↓	KB29 ↓		*B5 ↑	*B13 ↑	*B21 ↑	*B29 ↑		*B5 ↓	*B13 ↓	*B21 ↓	*B29 ↓
Str*6	KB6 ↑	KB14 ↑	KB22 ↑	KB30 ↑	KB6 ↓	KB14 ↓	KB22 ↓	KB30 ↓		*B6 ↑	*B14 ↑	*B22 ↑	*B30 ↑		*B6 ↓	*B14 ↓	*B22 ↓	*B30 ↓
Str*7	KB7 ↑	KB15 ↑	KB23 ↑	KB31 ↑	KB7 ↓	KB15 ↓	KB23 ↓	KB31 ↓		*B7 ↑	*B15 ↑	*B23 ↑	*B31 ↑		*B7 ↓	*B15 ↓	*B23 ↓	*B31 ↓
Str*8	KB8 ↑	KB16 ↑	KB24 ↑	KB32 ↑	KB8 ↓	KB16 ↓	KB24 ↓	KB32 ↓		*B8 ↑	*B16 ↑	*B24 ↑	*B32 ↑		*B8 ↓	*B16 ↓	*B24 ↓	*B32 ↓
	801	802	803	804	805	806	807	808		851	852	853	854		855	856	857	858

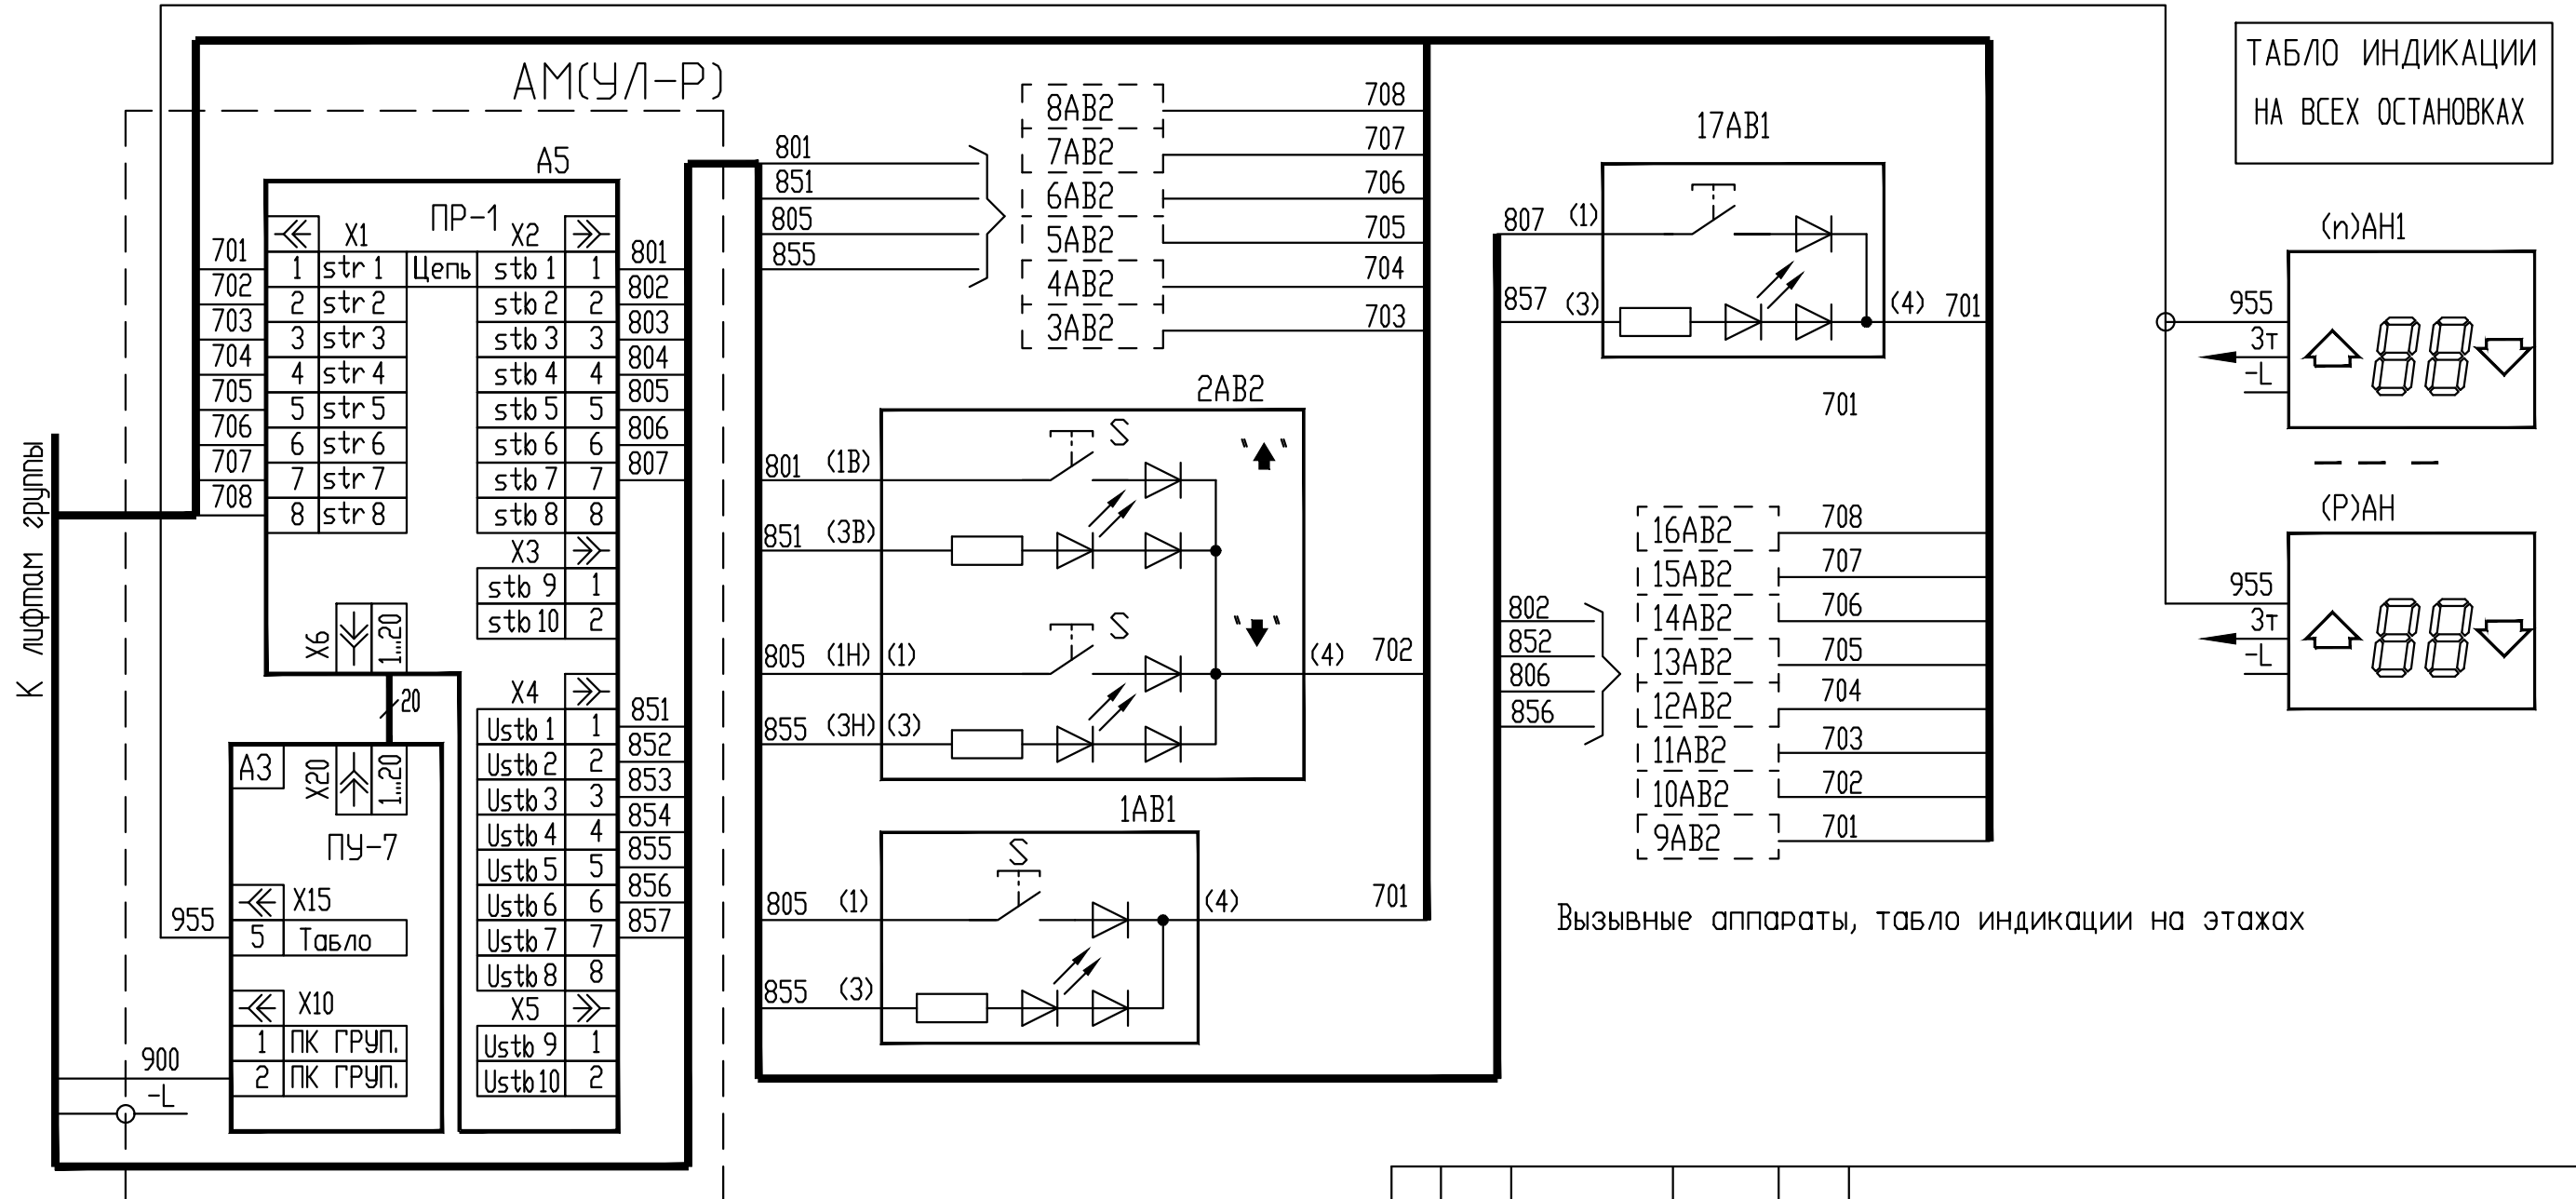

Подключение преобразователя частоты MFC21 (LIFTEQUIP)

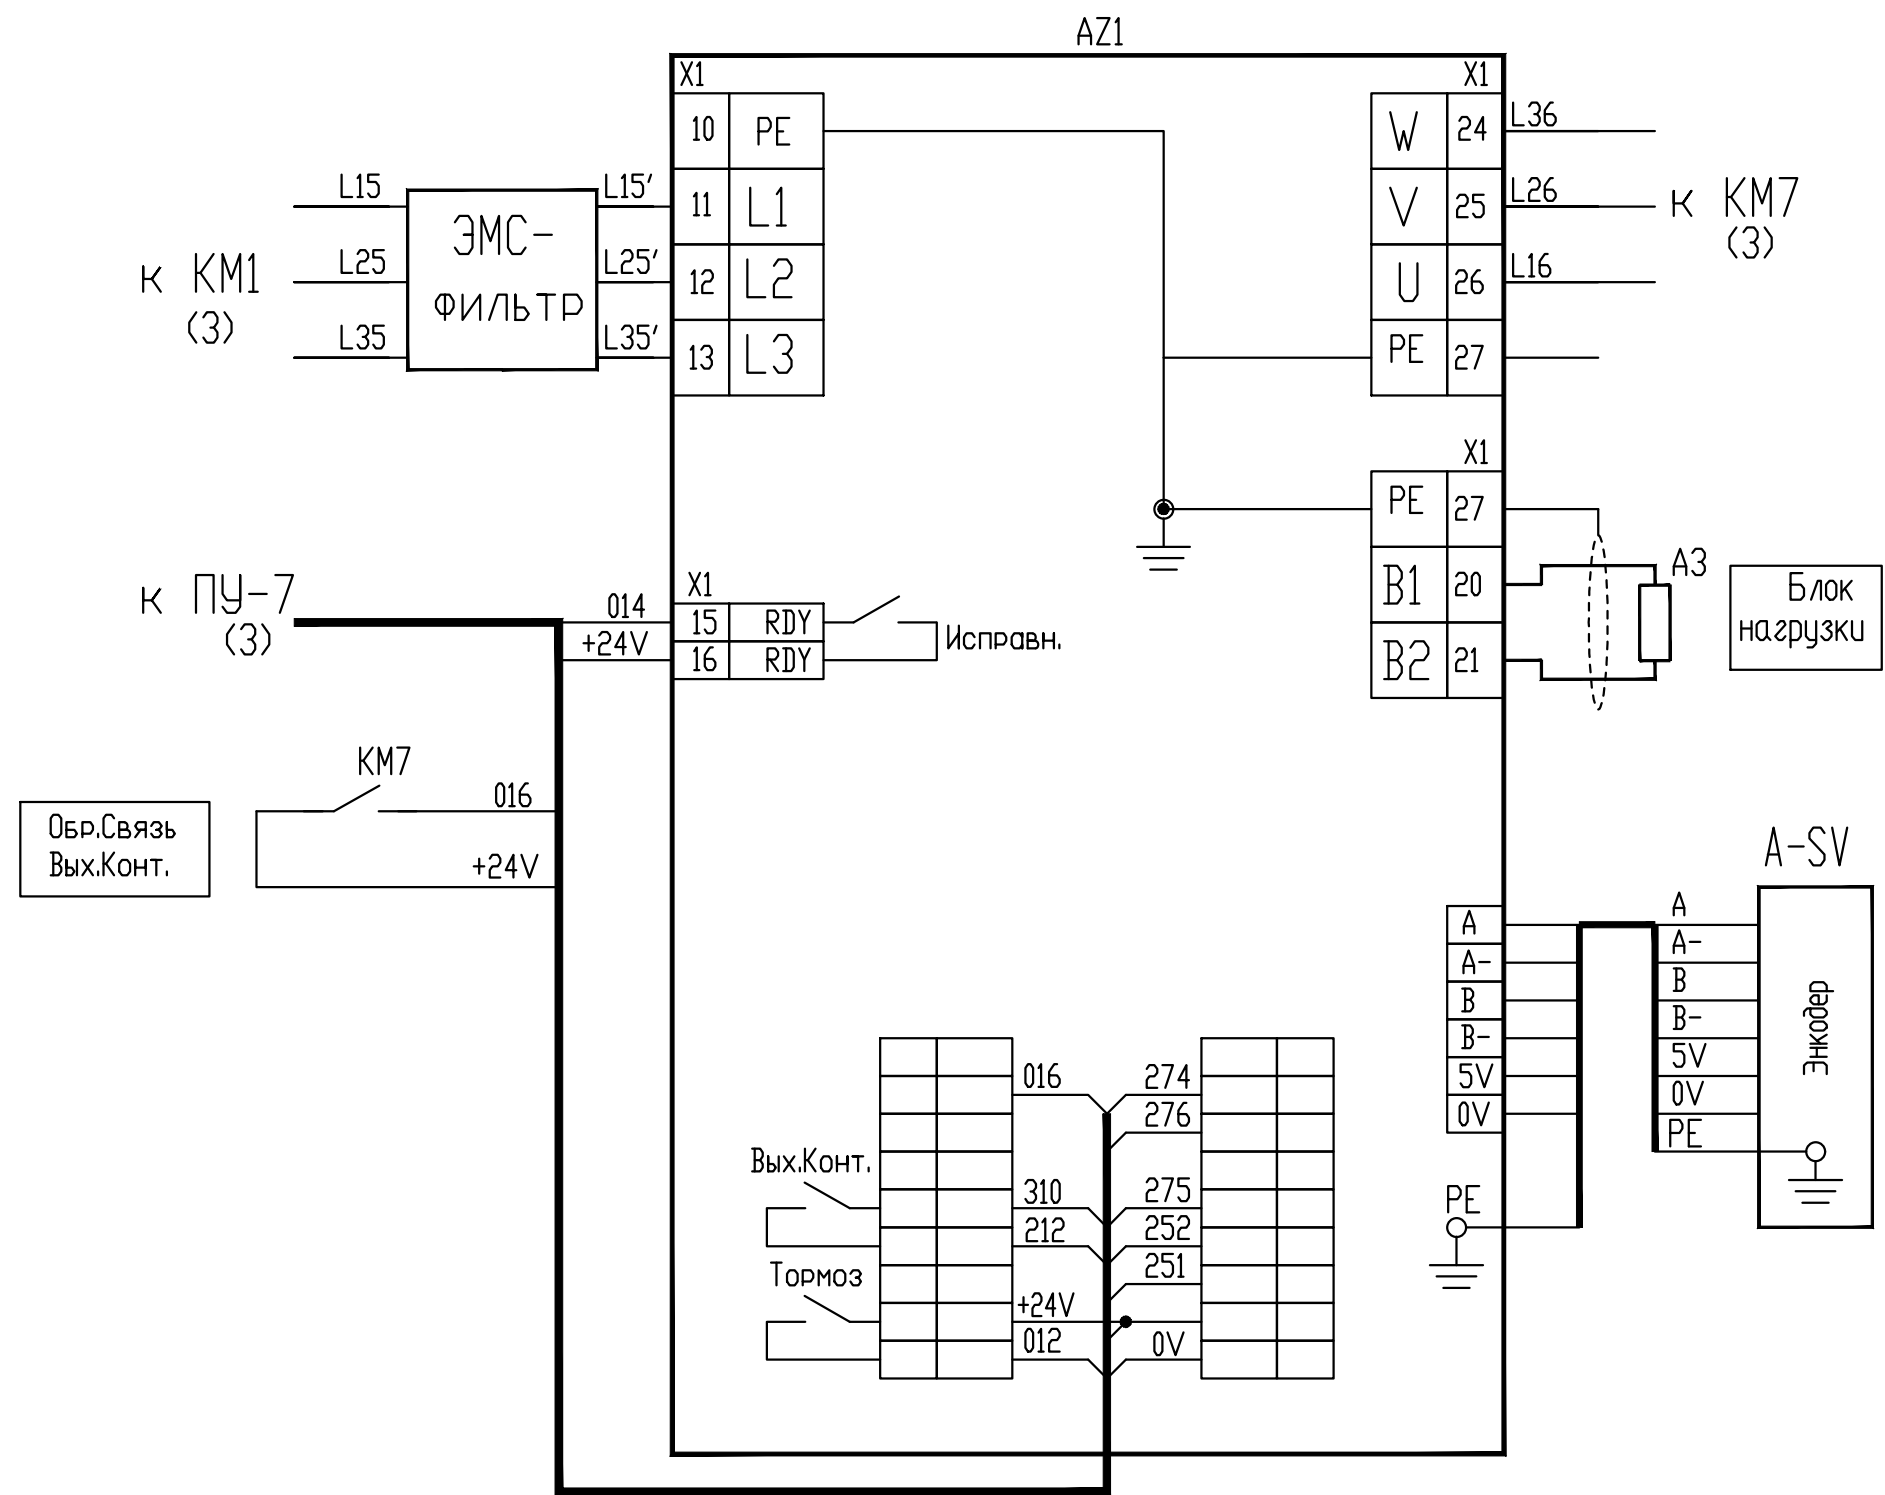

Инв. №подл.	Подп. и дата	Взам. инв. №	Инв. №дубл.	Подп. и дата

Изм.	Лист	№ докум.	Подп.	Дата